



Instructions for updating VBR100 player firmware

(Applies to Vizio VBR100 Blu-Ray Player only)

The firmware zip file consists of the firmware (image) and these instructions.

Burn the iso file to a CD using software capable of burning an image disc, such as Nero Burning Rom (select Recorder...Burn Image from the menu) or ImgBurn (freeware).

1. Power on the unit, wait for the "no disc" message.
2. Eject the tray.
3. Insert the CD-R and close the tray.
4. You should see the "Loading disc" message on the screen.
5. The firmware screen will be displayed (Fig 1).

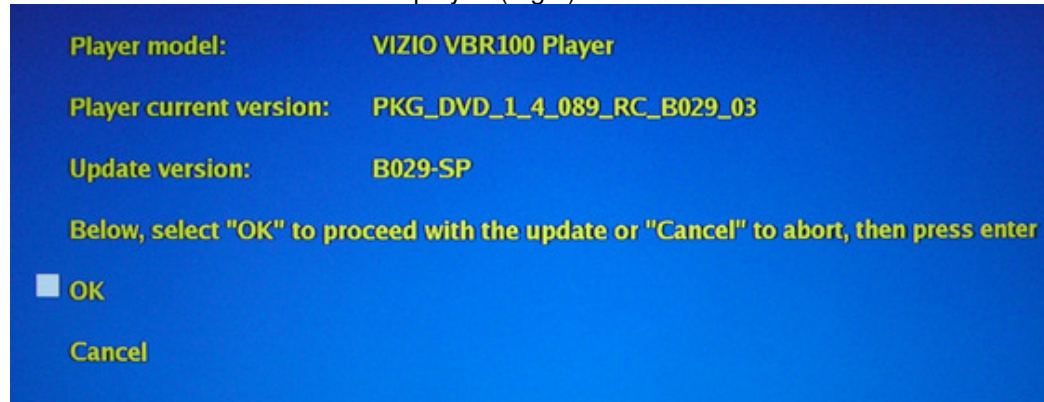


FIG 1

6. Press the **"SELECT"** button on the player remote to begin the update process. If you wish to cancel the process, highlight **"Cancel"** by pressing the ▼ key on the player remote, then press **"SELECT"**. The progress screen will be displayed (Fig 2).

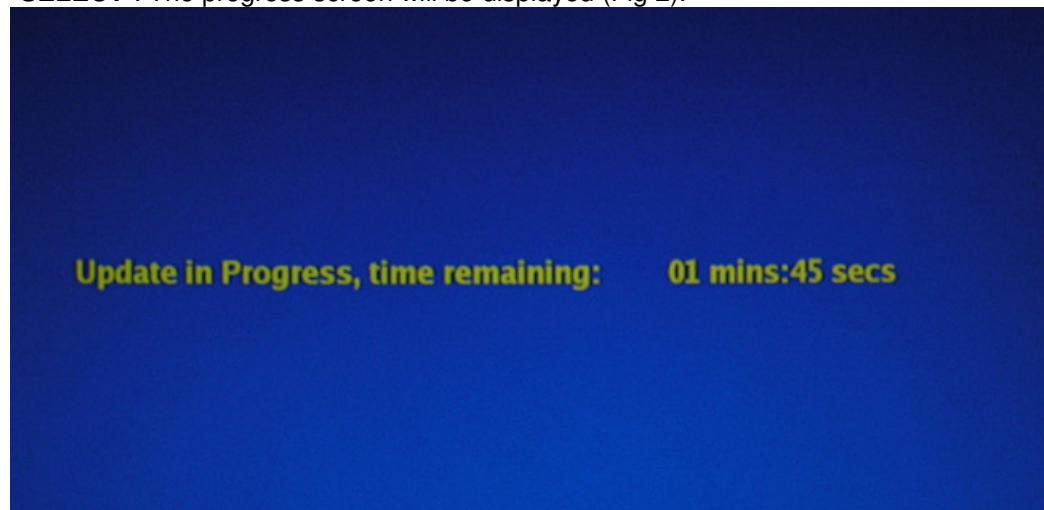


FIG 2 – DO NOT UNPLUG OR POWER OFF THE PLAYER DURING THE UPDATE!

When the update process is complete, the success screen will be displayed and the tray will open (Fig 3).

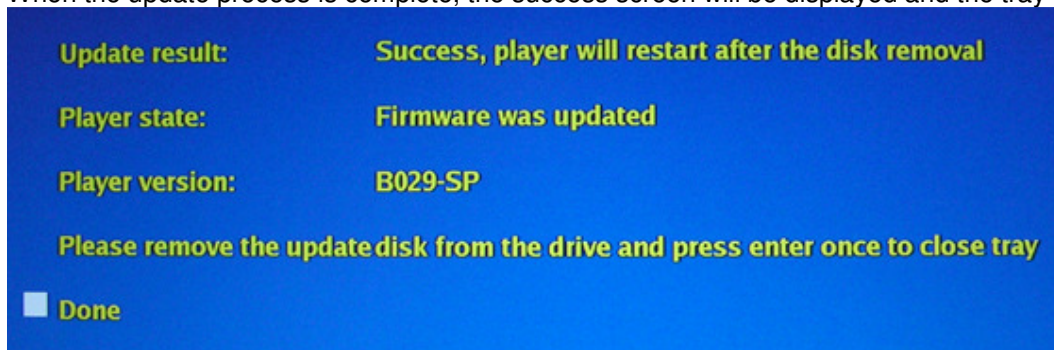


FIG 3

7. Remove the disc from the tray, then press **"SELECT"** on the player remote. The tray will close and the player will restart.

The firmware should then be updated. You can check the revision by doing the following:

1. Power on the unit and wait for the "no disc" message
2. Open the tray
3. Enter the digits 7804 in succession on the player remote.

The screen should display all the rev numbers and you should see the 3.4z label on the loader revision.

Loader Version	3.4z
PSL Version	PKG_DVD_1_4_089_RC_B029_03_s
Kernel Version	2.6.12-3.1-v10r15_524-uclibc-brcm
CFE Version	1.36.17
DVD Region	1
BD Region	A
MAC Address	0x00 22 84 01 e2 71
Vizio Version	B029_03_s

The Firmware Update process is complete.